

## AIR NOZZLES

PART NO.	AIR NOZZLE	PART NO.	AIR NOZZLE	PART NO.	AIR NOZZLE
46-4002	1/4	46-6079	63PR	102-2926	91PCSS
46-4011	1/4E	46-6091	63PW	46-9505	92P
46-2101	101 TIP	46-6007	64PA	102-2682	91PC
46-2190	190 TIP	46-6013	66PD	102-2924	92PCSS
46-2191	191 TIP	46-6014	66PE	46-9309	93HA
46-2200	200 TIP	46-6016	66PH	46-9300	93P
46-2201	201 TIP	46-6041	66R	46-9400	94P
46-2206	206 TIP	46-6018	66S	46-9503	95AP
46-2242	242	46-6020	66SD	46-9502	95AS
46-2244	244	46-6092	66SD-3 (for Adhesives)	46-9509	95HA
46-2250	250	46-6103	66SDJG (for Adhesives)	46-9500	95P
46-2252	252	46-6082	66SK	46-6882	96G
46-2262	262	46-6026	67PB	46-9703	97AP
46-9900	2S	46-6028	67PD	46-9702	97AS
46-7001	3/4 115 GUN + 26	46-6032	68PB	46-9700	97P
46-4004	37322	46-2013	706 TIP	46-6088	A63PB Alum
46-4006	3/8F	46-2020	709SS TIP	46-6083	A68PB Alum 7N
46-3012	33PM	46-2025	713 TIP	46-1031	AA1
46-2352	352	46-7003	77P	46-142	D90P 460 GUN (OBS.)
46-3027	36SD	46-7005	78S	46-131	J92P 460 Gun
46-3050	36SK	46-7006	78SD	46-126	J92R 460 GUN
46-3040	38PM	46-13	790 WHIRL CORE ( I )	46-134	K92P 460 Gun
46-2302	302SS	46-14	792 WHIRL CORE ( / )	46-1002	R-3
46-2390	390SS	54-1042	793	46-1042	R-6SS
46-2391	391SS	46-156	797	46-1011	R-8
46-6000	63P	46-9050	905P	46-1046	R27SS
46-6002	63PB	46-9000	90P	46-1048	R30SS
46-6061	63PH-1 (for Adhesives)	102-2681	92PC		

( I ) = STRAIGHT    ( / ) = ANGLE